



ASSEMBLY INSTRUCTIONS

code: **AWO 000EI**

Name: **7/EI20/DSPR**

Metal casing for: alarms, access control....

IM000EI



Edition: 1 from the 13th January 2012

Supersedes edition: -----

1. Destination:

The **AWO 000EI** metal casings are designed as components (supplying) in intruders alarms, access control systems, security systems etc. There are intended for installation:

- control panel optional with supplementary modules
- access control controllers with optional modules
- radio or GSM transmitter with optional module PS
- other dedicated devices, components etc.

2. Installation:

The metal casing (+PCB) must be installed by a qualified installer, holding the relevant certificates, required and necessary in the particular country for connecting (interfering with) the 230 V AC systems and low-voltage installations.

Because the transformer is designed for the continuous operation and is not equipped with ON/OFF switch, the power supply line should have the appropriate overload protection. The user should be informed how to disconnect the unit from the mains (the most often by separate and mark the adequate fuse in the fuse box). The power supply installation should be conform to the applicable standards and law.


The casing (+PCB) should be installed indoors, where the air humidity is normal (RH=90% max. without condensation) and temperature in the range of -10°C to +40°C.



Caution! Prior to entering for installation it is necessary to make sure if the voltage in the 230 V/AC circuit is disconnected. All service works inside the housing must be carried out with 230V/AC supply voltage disconnected.

1. Mount the PCB (control panel, etc) with dedicated holes (use distance pins, bracket screw).
2. Install metal casing in dedicated place and bring in the connecting (~230V) and signal conductors through cables bushings.

Remarks: supply circuit ~230V should be carried out with three-core cable (with yellow-green protective PE conductor).

3. Supply conductors ~230V should be connected to **230V / AC L-N** terminals of the transformers. Protective conductor should be connected to the terminal marked with grounding symbol. 



Caution! Operating the power supply without properly made and technically operational electric shock protection circuit is IMPERMISSIBLE! This creates hazard of equipment damage and risk of electric shock.

4. Connect the output of transformer to the terminals (~AC) on the PCB, using installed cables

Remarks: connect required voltage U1 or U2 (secondary voltage) for the correct device.

5. If necessary, make other connections required for the correct type of system / device.

Remarks: consistent with requirements and recommendation of the producer.

6. **Start the system (switch on ~230V, battery), adjust or configure: according to procedure of the producer's system.**

7. After installing and checking the proper operation of the system, close the casing.

3. Technical data:

TECHNICAL DATA	
Power supply voltage	230V/AC, 50Hz (-/+15%)
Transformer	EI 20/16/18
Transformer norm	EN 61558-2-6
Space for battery	7Ah/12V
Tamper protection	1x – opening casing
Output current TAMPER - max	500mA@50Vdc
Casing: IP	IP 20
Operating temperature	-10°C÷40°C
Relative humidity RH –max.	90 [%]
Dimensions internal (W x H x D)	250 x 250 x 80 [-/+2] [mm]
Material description	Sheet steel DC01, Thickness: 0,7mm, Protection anticorrosion, Color: RAL9003
Destination	Indoor
Net Weight	~2.00 [kg]
Gross Weight	~2.10 [kg]

Technical data of transformer: EI20/16/18

NAZWA NAME	C	S	U	I	U1 or U2	I1 or I2	F	t
EI 20/16/18	-	20VA	230V/AC	0,12A	16V or 18V	1,2A or 1,0A	T 200mA/250V	130°C

C- Transformer casing

S - Power rating

U -Supply voltage

I - Current draw at nominal load, from network ~230V

U1 or U2 - Secondary voltage


I1 or I2 - Nominal output current

F – Fuse F in the primary windings of the transformer

t- non ressetable fuse 130°C

4. Panels which can be mounted in the casing.

- **DSC:** 1) PC 1616, 1832
Modules: 2) 2x (4108, 5108, 5208, 5100, 4116)
3) 4204, 4216, 4580, 5400, 5204, 5580, 5200
- **PARADOX:** 1) 728ULT, E55, E65, SP5500, SP6000
Modules : 2) ZX8, APR3- HUB2, ZX8SP, APR3- ADM2
- **RISCO:** 1) PRO24
Modules: 2) E04, EZ8, EZ16
- **SATEL:** 1) CA4V1, CA5, CA6, VERSA5,10, INTEGRA 24
Modules: 2) CA64 (PP, EPS, ADR, O-R, O-ROC, O-OC,OPS- OC, OPS- R, OPS- ROC, VGM- 16, SR)
- **PYRONIX:** 1) MATRIX 424, 6
- **CROW:** 1) RUNNER 4,8
- **SUMMIT:**1) PENTA
- **ROEL:** SIGMA 6,12, CERBER
- **EBS:** PX 202

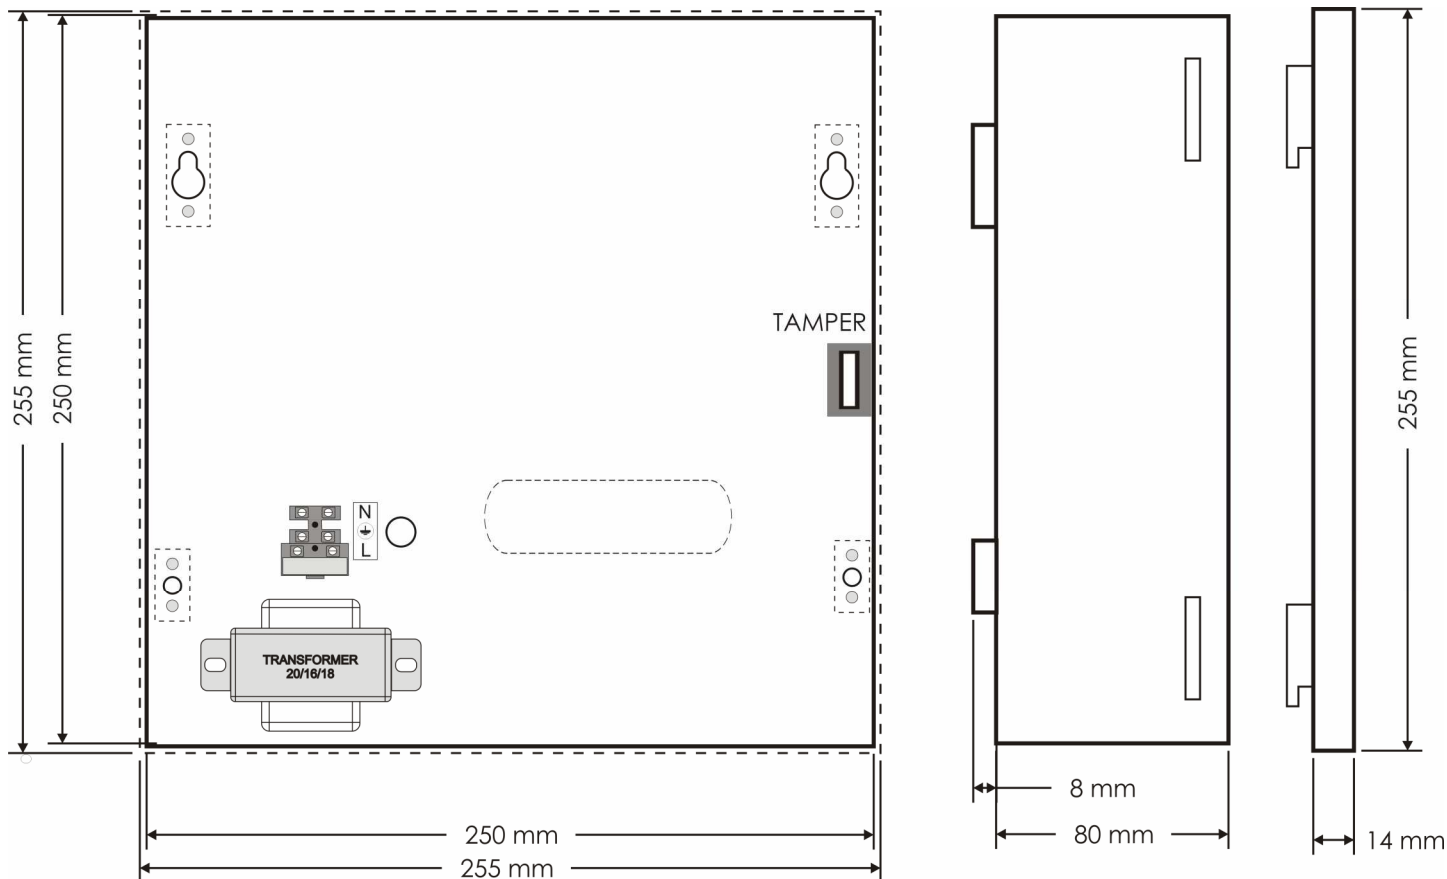

WEEE MARK

The waste electric and electronic products do not mix with general household waste. There is separate collection system for used electric and electronic products in accordance with legislation under the WEEE Directive and is effective only with EU.

GWARANCJA :

24 miesiące od daty sprzedaży , 36 miesięcy od daty produkcji.
 GWARANCJA WAŻNA tylko po okazaniu faktury sprzedaży, której dotyczy reklamacja

GUARANTEE:

24 months from the date of sale, 36 months from the date of production.
 THE GUARANTEE IS VALID only upon presenting the sale invoice for the unit for which the claim is made.

PRODUCENT / PRODUCER

Pulsar K.Bogusz Sp.j.
 Siedlec 150,
 32-744 Łączycza, Poland
 Tel. (00 48) 14-610-19-40, Fax. (00 48) 14-610-19-50
 e-mail: biuro@pulsar.pl, sales@pulsar.pl
 http:// www.pulsar.pl, www.zasilacze.pl